## UM\_FAQ00004

## Save and load settings of BM LineMaster

It is possible to Save and Load the settings from the LineMaster. You can also copy the settings from one LineMaster to another. All settings except the serial number will be copied.


1) Inset the USB into the LineMaster




2) Go to "System"



3) Press "Settings"

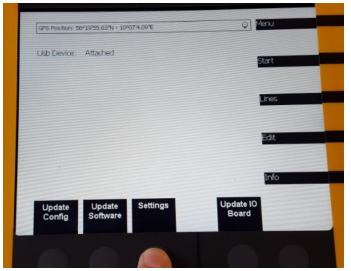

4) Press "Save" for save settings

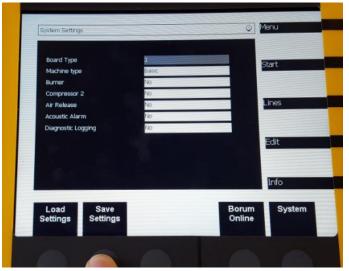

5) Press "Load" for load settings

Board Type	1		Start
Machine type	Basic		Start
Burner	No		
Compressor 2	No		-
Air Release	No		Lines
Acoustic Alarm	No		
Diagnostic Logging	No		-
			Edit
			Info
Load Save		Borum	System
Settings Settings		Online	System
Statements in the second second			