


## Update IO Board in LineMaster (Using ST-Link)

The IO board must be updated using the ST-Link if the software version is 1.xx.xx.41 or less

- 1) Locate X11 at the IO Board in the LineMaster

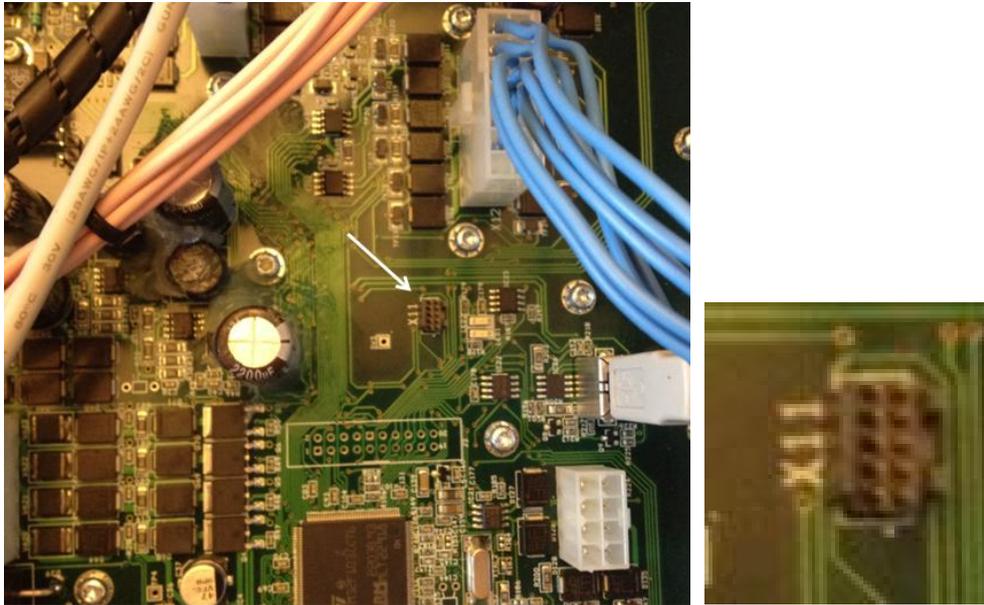


- 2) Connect the ST Link



The small 10 pin plug, must be connected to X11 on the IO board of the LineMaster. It must be connected so the red "wire" is down.



Also check that it is Red to Red in the connection from the big to small plug.

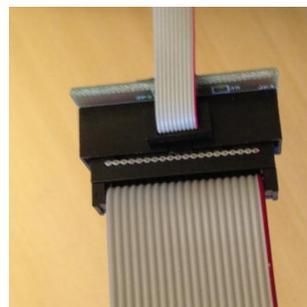

The USB plug must be connected to a laptop (Or desktop)

