



Replacement of radiator



BM 3000/5000


- Drain diesel tanks.
- Remove diesel tank (LEFT side).
- Loosen cover rear end.
- Drain radiator
- Replace radiator

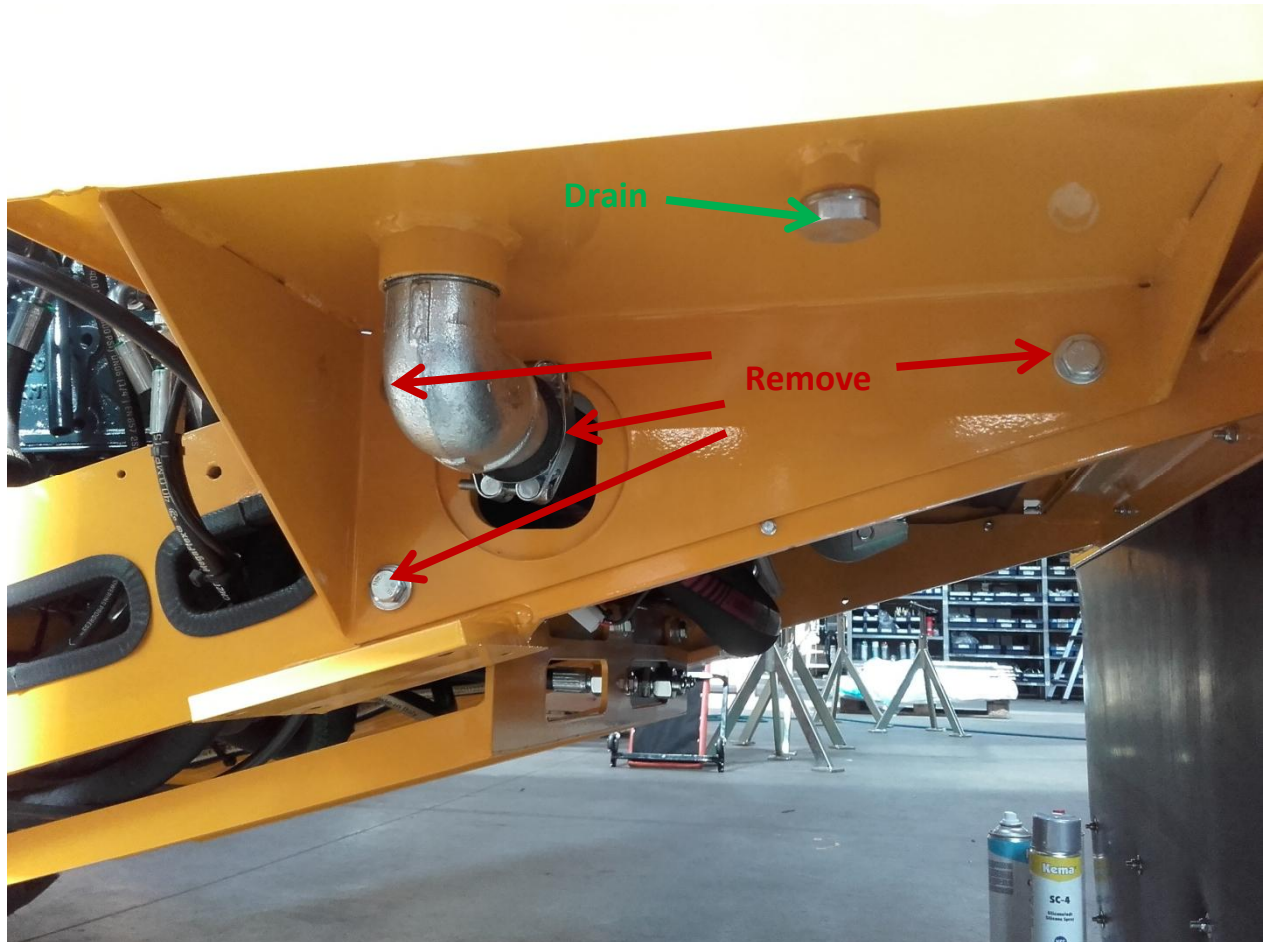




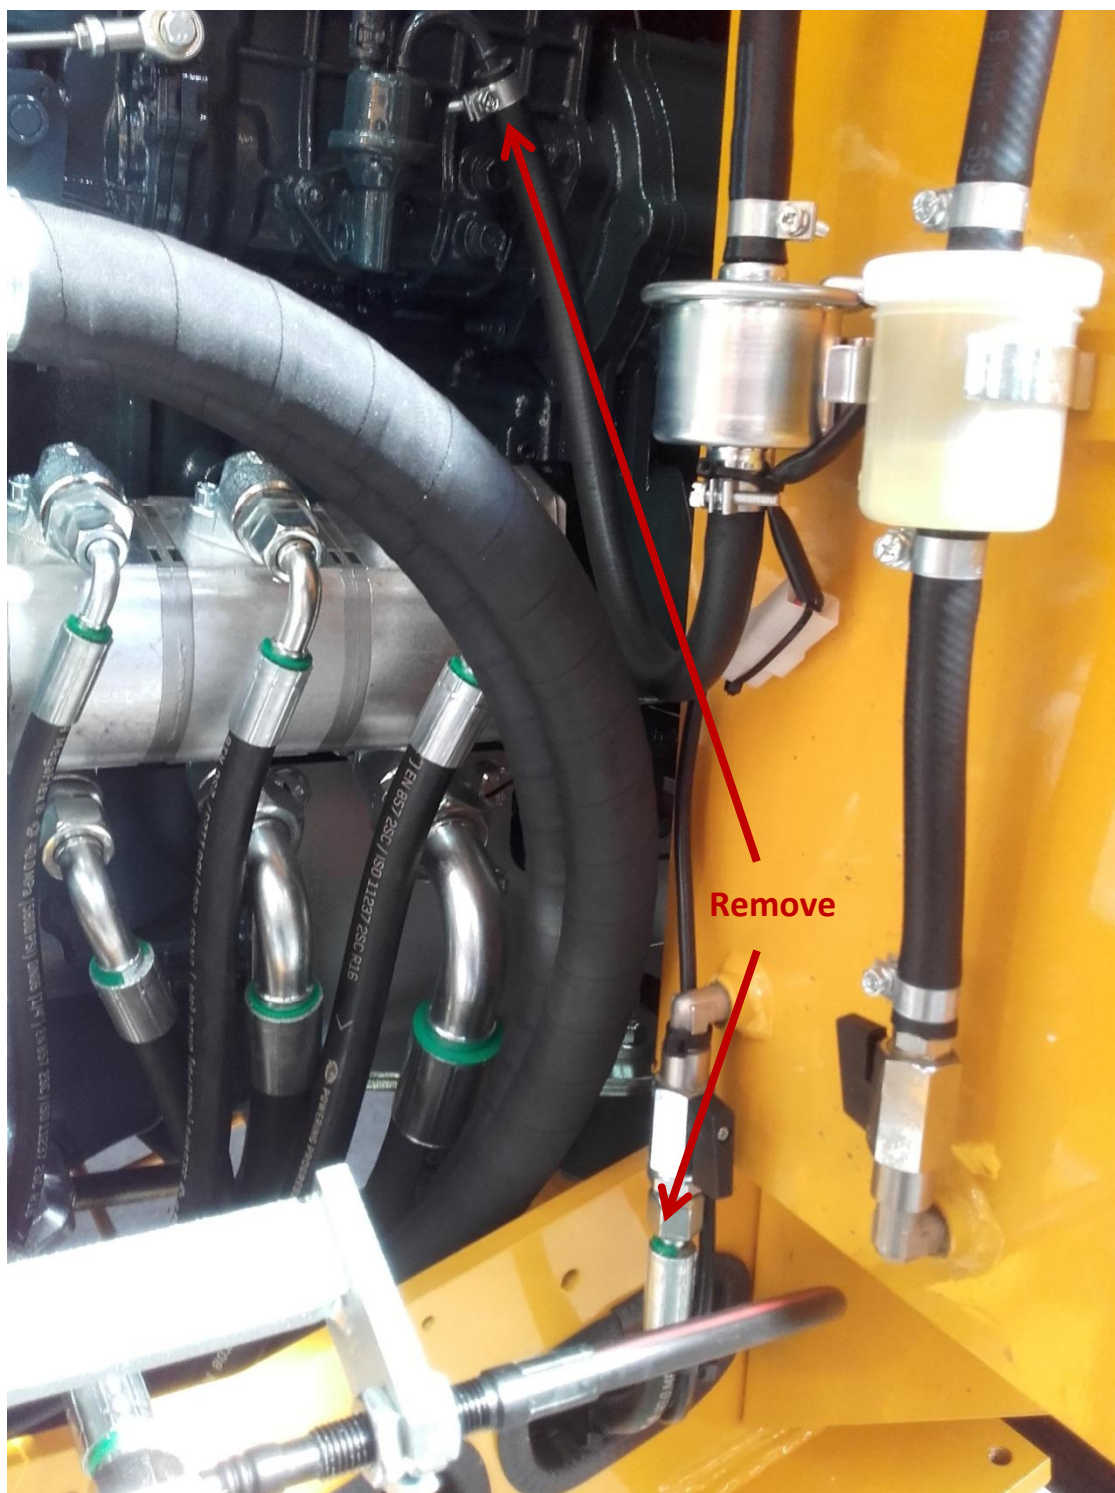

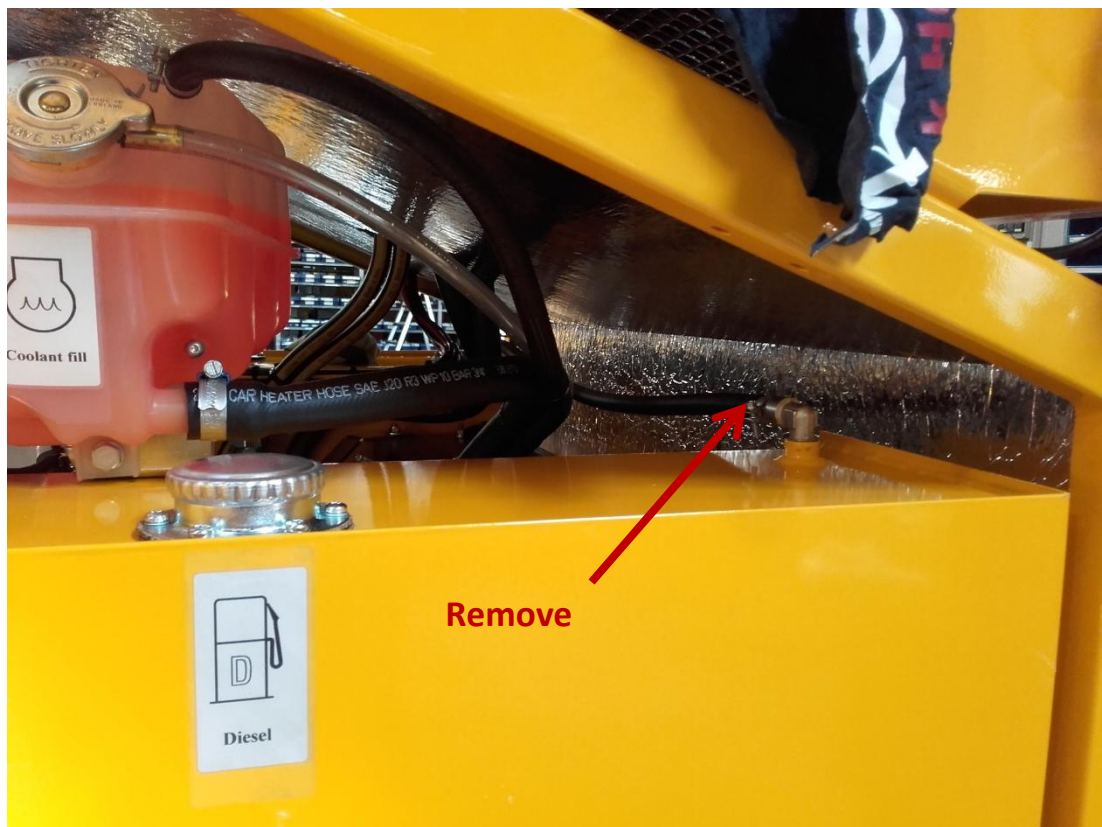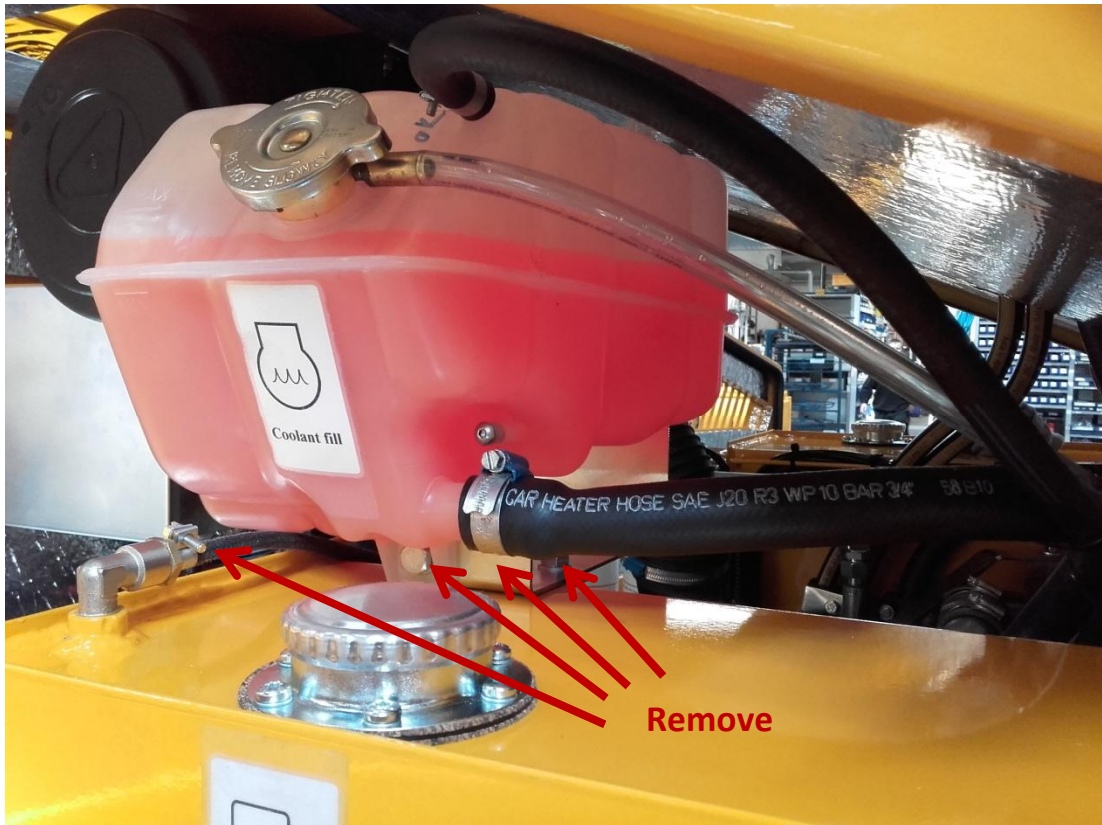


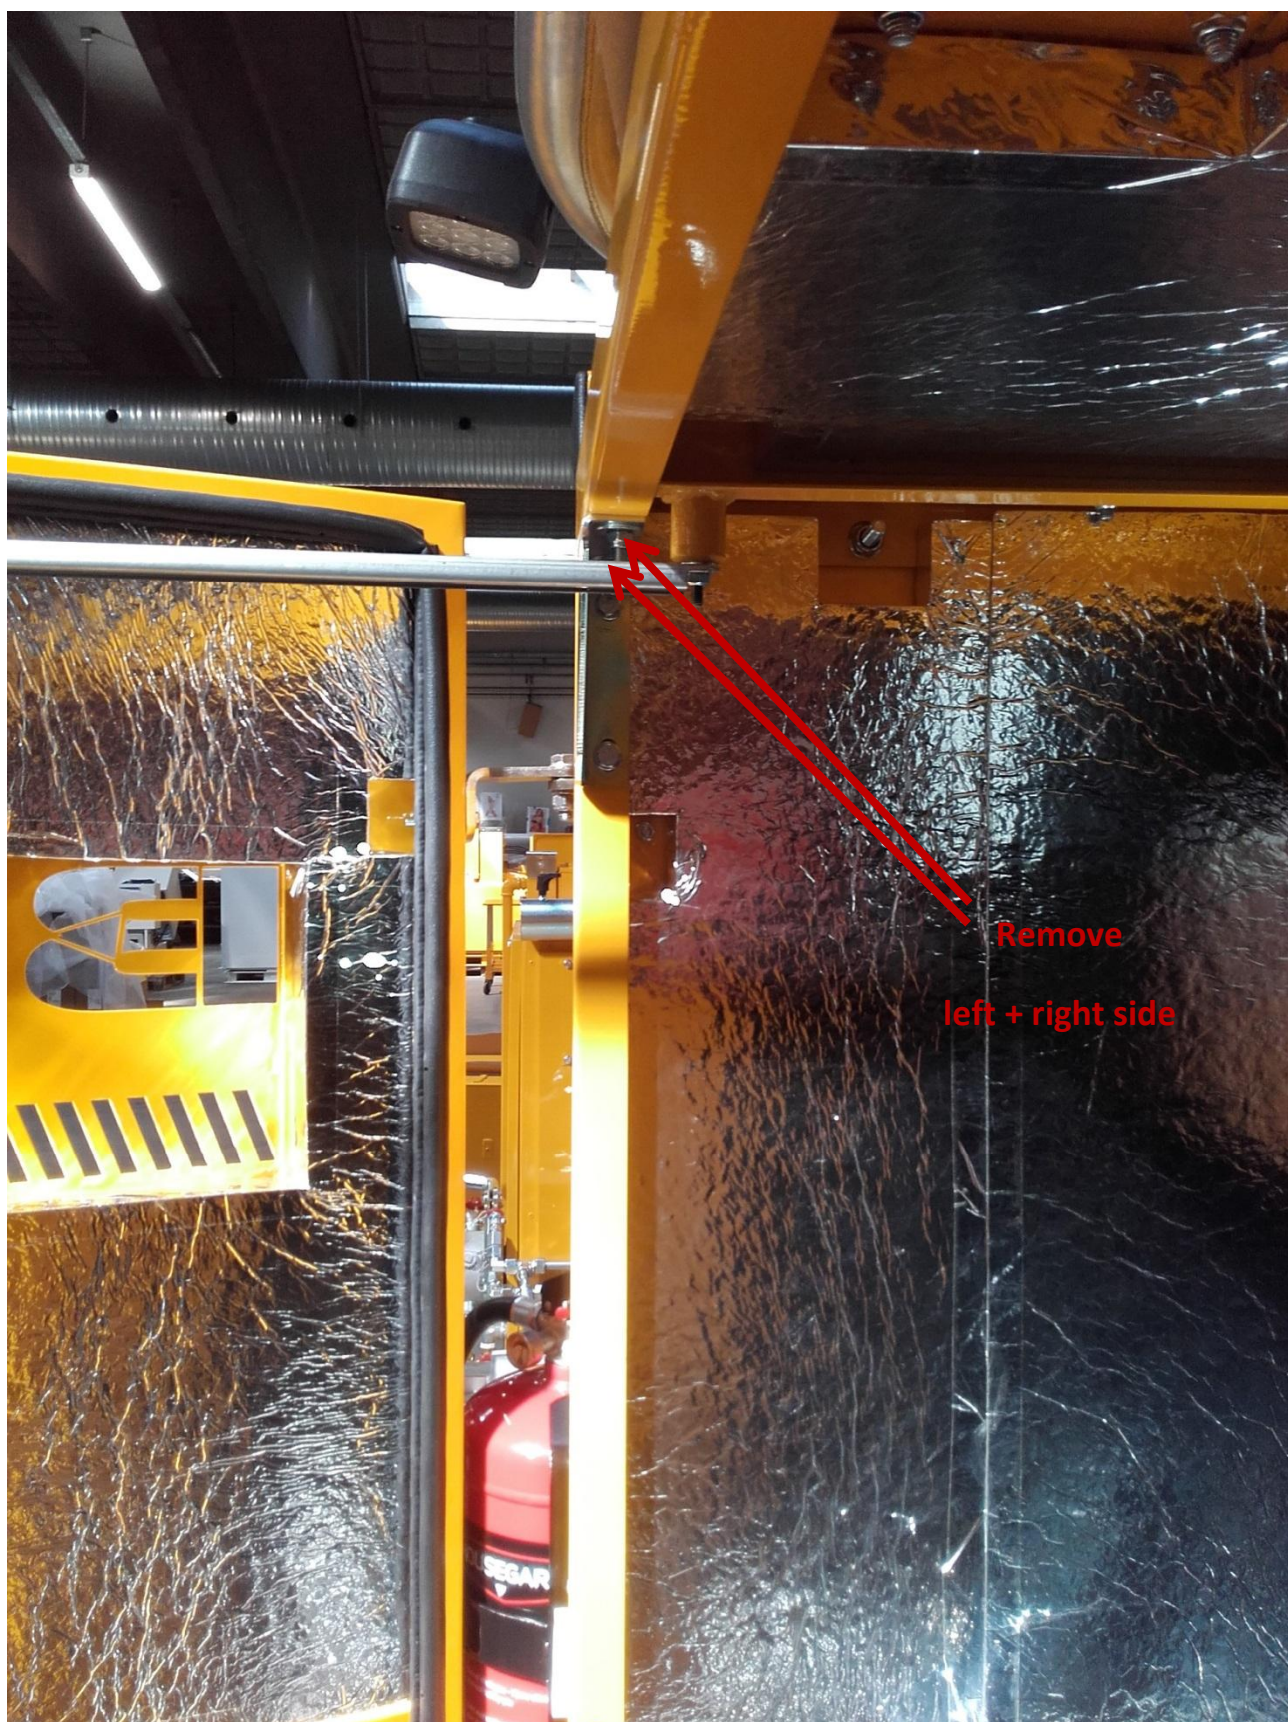

Remove
left + right side

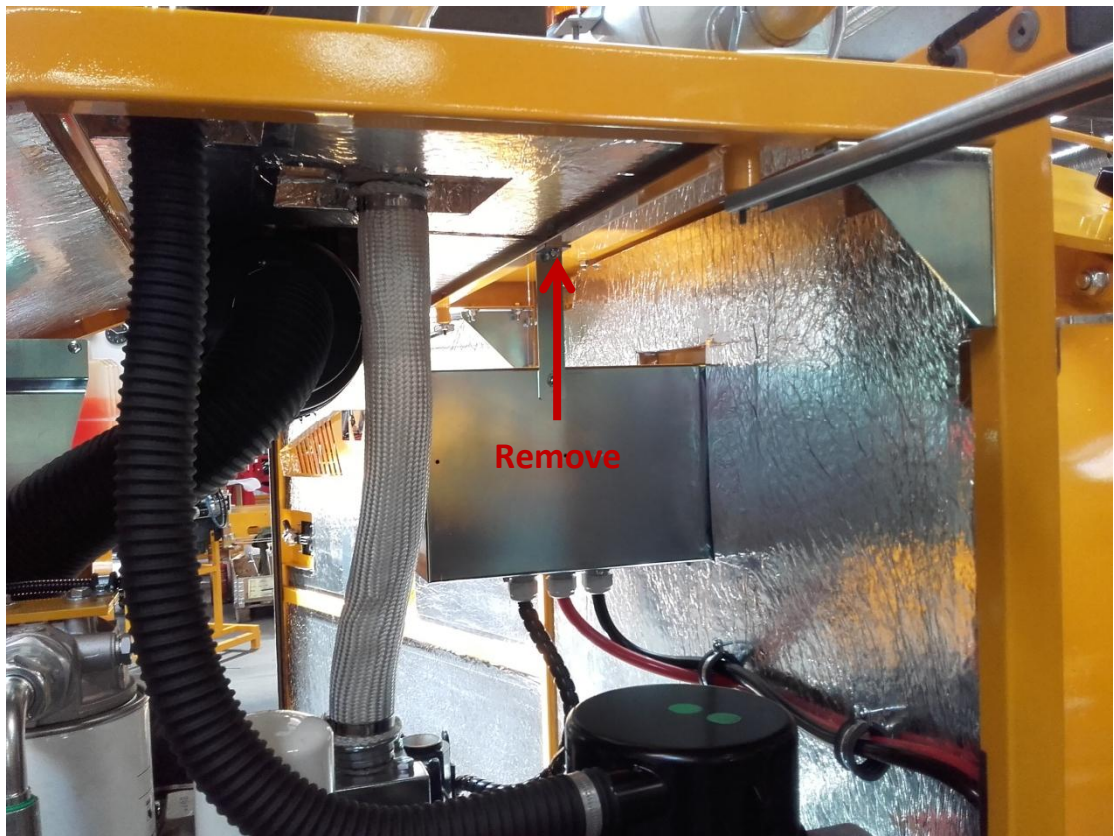

- Pull the cover backward (85mm)
- And use these bolt holes for re-attaching the cover.

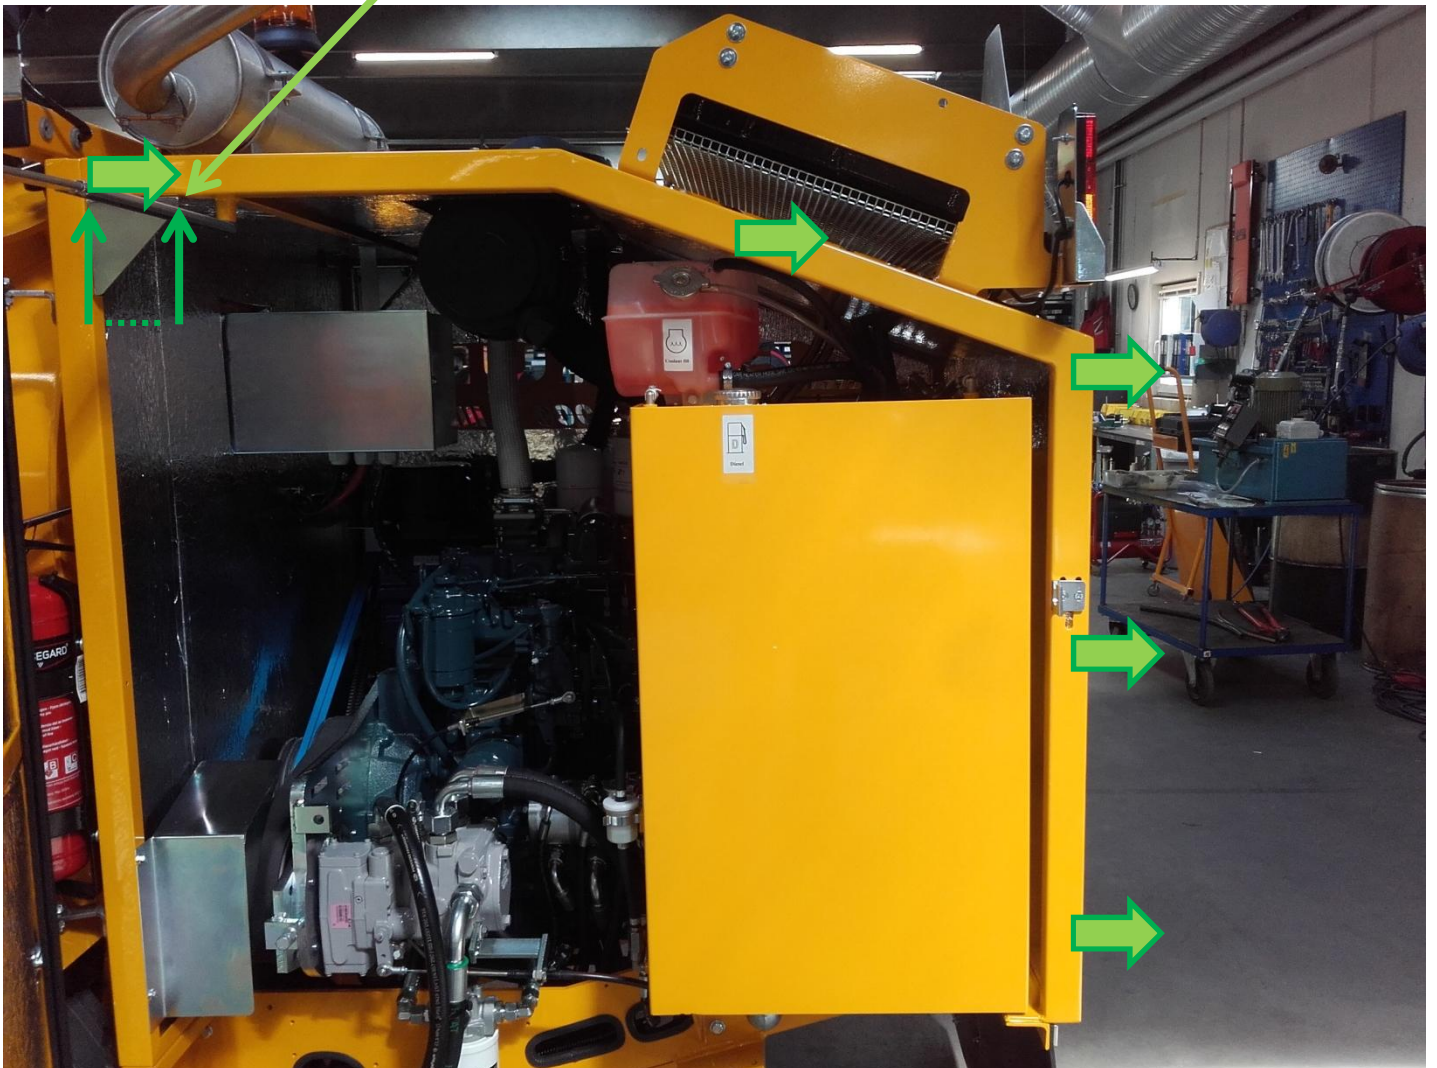



- Remove hoses, bolts and bracket.
- Replace the radiator

