

FAQ00017

Adjusting the hydraulic pressure for the Broom

You can do on the hydraulic valve, that is placed underneath the material tank, in near the Heat oil pump.



If you turn it Clockwise, you should have more pressure to the Broom

